

| Accessories | | | | | | | | | | | | | |
|--|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Remote control RCC-02 or RCC-03 | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Module Xcom-232i | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Communication sets Xcom-LAN / Xcom-GSM / Xcom-SMS | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Battery Status Processor BSP | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Remote Control Module RCM-10 (3 m) | • | • | • | • | • | • | • | • | • | | | | |
| 2 aux. contacts module ARM-02 | • | • | • | | | | | | | | | | |
| Cooling Module ECF-01 | • | • | • | | | | | | | | | | |
| Battery temp. sensor BTS-01 (3 m) | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Communication cable for 3ph and // CAB-RJ45-8-2 | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Mounting frame X-Connect | | | | | | | | | | • | • | • | • |

* Adjustable with the RCC-02/-03

** These features are valid only when using the cooling module ECF-01.

⁽¹⁾ With -01 at the end of the reference, means 120V/60Hz. Available for all Xtenders except XTH 8000-48

Data may change without any notice